

Guide to commissioning your Digistat +2RF / +3RF

Programmable Room Thermostat Wireless


24 Hour / 5-2 Day / 7 Day

Models: RF700,22090 / RF701,22092


WARNING If you do not have the knowledge to install the SCR safely then you must arrange for a competent electrician to install it for you. Wiring must conform to the current IEE regulations.

Prior to commencing the installation you must ensure the mains supply is switched off.

1. Do not install the Digistat +RF transmitter until after you have completed the commissioning process.
2. Remove batteries from the battery compartment in the Digistat RF transmitter unit and allow the screen to go blank.
3. Turn off the power supply to the SCR receiver unit and leave for 5 seconds.
4. Turn the power back on to the SCR unit and check red light is on.
5. To check the SCR is wired correctly, press the override button No.2 once and check the green light comes on and boiler fires.

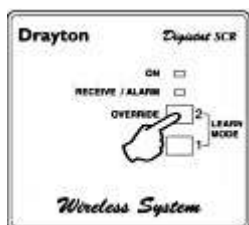

6. Put the SCR unit into its learn mode. Press & hold down button No.1 (Keep depressed), then press No.2 and keep depressed {The Red LED light will flash a couple of times and then it will go out}

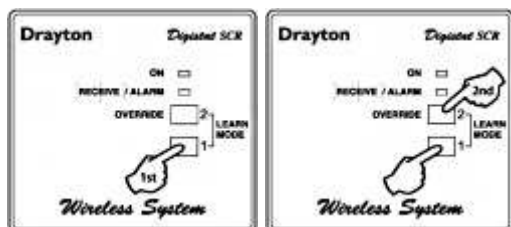

7. Now release both the buttons – {the two LED lights should be on}
8. Get the Digistat + 2RF / + 3RF transmitter unit and stand two metres away from the SCR unit with the Digistat unit in your hand.
9. Replace the batteries in the transmitter unit and replace the battery cover.
10. The Red LED light will now flash for approx. 7 seconds to tell you that the two units are initialising. This confirms that the radio signal is being sent and received.
11. The Digistat +RF transmitter unit can now be fixed to the wall.

Congratulations, you have completed the commissioning process.

*This guide is offered as a courtesy by www.gasapplianceguide.co.uk
It is prepared using information supplied by Drayton Controls (the manufacturer).
No liability will be accepted for the outcome of utilising these instructions.*